



PORTABLE RECHARGEABLE BLUETOOTH SPEAKER

# MRBT USER'S GUIDE



# SAFETY INFORMATION

## **WARNING — LISTENING AT HIGH VOLUME FOR A LONG TIME MAY DAMAGE YOUR HEARING**

THE EXCLAMATION POINT WITHIN AN EQUILATERAL TRIANGLE IS INTENDED TO INFORM THE USER TO THE PRESENCE OF IMPORTANT OPERATING AND MAINTENANCE (SERVICING) INSTRUCTIONS IN THE LITERATURE ACCOMPANYING THE APPLIANCE.



### **SAFETY INSTRUCTIONS — PLEASE READ BEFORE USE**

 
- NEVER DISASSEMBLE OR ATTEMPT TO MODIFY THE PRODUCT IN ANY WAY.
- DO NOT ATTEMPT TO SUBMERGE THE PRODUCT IN WATER OR EXPOSE IT MOISTURE, WATER OR LIQUIDS OF ANY KIND.
- DO NOT DROP THE PRODUCT OR PLACE THE PRODUCT ON ITS CURVED SIDE IN A LOCATION ABOVE GROUND WHERE IT MAY ROLL AND FALL.
- DO NOT COVER OR RESTRICT VENTILATION AND USE ONLY IN AREAS OF ADEQUATE VENTILATION WITH AT LEAST 15CM OF SEPARATION.
- AVOID HOT AND/OR HUMID ENVIRONMENTS SUCH AS BATHROOMS, CONSERVATORIES, CARS OR IN DIRECT SUNLIGHT.
- DO NOT PLACE OR INSTALL THE PRODUCT NEAR TO SOURCES OF HEAT SUCH AS RADIATORS OR STOVES.
- DO NOT EXPOSE THE PRODUCT DIRECTLY TO NAKED FLAMES, HOT SURFACES OR OTHER APPARATUS THAT PRODUCE HEAT.
- THE SAFE OPERATING TEMPERATURE RANGE OF THIS PRODUCT IS +5°C TO +40°C.
- DO NOT EXPOSE THE PRODUCT TO OBJECTS OR FORCES WHICH MAY PIERCE OR DAMAGE THE ENCLOSURE.
- FOR CHARGING, THIS PRODUCT REQUIRES 0.5A (500MA) AT 5V DC. CHECK USB PORT POWER SUPPLY SPECIFICATIONS BEFORE USE.
- CAUTION: AC-DC USB POWER SUPPLIES MAY CARRY ELECTRIC SHOCK HAZARD. READ POWER SUPPLY SAFETY INFORMATION BEFORE USE.
- DO NOT SHORT CIRCUIT OR CONNECT LOADS IN EXCESS OF 0.5A (500MA) TO THE POWER CABLE USB SOCKET (MARKED "OUT") WHILE THE CABLE IS CONNECTED TO THE PRODUCT.
- DO NOT DAISY CHAIN OR CONNECT MULTIPLE POWER CABLES TO ANY SINGLE USB SOCKET OR USB POWER SUPPLY.
- DO NOT CONNECT ANY OTHER LOAD OR DEVICE TO THE POWER CABLE USB SOCKET (MARKED "OUT") WHILE THE POWER CABLE                      USB PLUG (MARKED "IN") IS CONNECTED TO A USB PORT POWER SUPPLY.
- DO NOT STRESS, BEND, PINCH OR FORCE CABLES IN SUCH A WAY AS TO INCUR DAMAGE.
- DO NOT STORE THE PRODUCT WITH A LOW/FLAT BATTERY OR LEAVE THE UNIT UNUSED FOR A LONG PERIOD OF TIME.
- DO NOT LEAVE THE PRODUCT PERMANENTLY ON CHARGE.
- DO NOT USE THIS PRODUCT NEAR MEDICAL DEVICES OR ON AN AIRPLANE.
- REFER ALL SERVICING AND REPAIR TO ORIGINAL MANUFACTURER. SERVICING IS REQUIRED WHEN THE PRODUCT IS DAMAGED IN ANY WAY SUCH AS POWER-SUPPLY CORD IS DAMAGED, LIQUID HAS BEEN SPILLED OR OBJECTS HAVE FALLEN ONTO THE UNIT, THE UNIT HAS BEEN EXPOSED TO RAIN OR MOISTURE, DOES NOT OPERATE NORMALLY OR HAS BEEN DROPPED.

## BATTERY

THIS PRODUCT CONTAINS A NON-SERVICEABLE RECHARGEABLE LITHIUM ION BATTERY. DO NOT ATTEMPT TO OPEN OR DISASSEMBLE THE UNIT TO REPLACE OR REMOVE THE BATTERY YOURSELF. PLEASE REFER TO ORIGINAL MANUFACTURER FOR BATTERY SERVICING AND REPLACEMENT. FOLLOW SAFETY INSTRUCTIONS ABOVE CAREFULLY. IF FLUID SHOULD LEAK FROM THE UNIT OR RECHARGEABLE BATTERY, DO NOT TOUCH. IF FLUID COMES IN CONTACT WITH EYES, WASH THOROUGHLY WITH WATER AND SEEK MEDICAL ADVICE. DO NOT RUB EYES. IF YOU SUSPECT THAT THE BATTERY IS FAULTY THROUGH UNEXPECTED BEHAVIOUR SUCH AS NOT HOLDING CHARGE, PLEASE TURN OFF AND DO NOT ATTEMPT TO CHARGE OR USE THE PRODUCT. CONTACT THE ORIGINAL PRODUCT MANUFACTURER IMMEDIATELY.

## ENVIRONMENTAL

ALL PACKAGING MATERIALS ARE RECYCLABLE, PLEASE DISPOSE OF IN ACCORDANCE WITH YOUR LOCAL RECYCLING REGULATIONS. THE PRODUCT MAY CONTAIN BATTERIES AND HARMFUL SUBSTANCES SO SHOULD NOT BE TREATED AS HOUSEHOLD WASTE. WHERE POSSIBLE WE WILL REPAIR ANY FAULTY UNITS TO KEEP THE PRODUCT OPERATIONAL FOR AS LONG AS POSSIBLE. IF YOU WISH TO DISPOSE OF THE PRODUCT, PLEASE CONTACT THE ORIGINAL MANUFACTURER TO RETURN IT FOR RECYCLING OR FOR ADVICE ON SUITABLE RECYCLING METHODS.

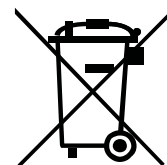

## REGULATORY COMPLIANCE STATEMENTS

THIS PRODUCT CONTAINS A 2.4GHZ RADIO TRANSMITTER AND SHOULD BE USED IN SUCH A MANNER THAT HUMAN CONTACT IS MINIMISED DURING NORMAL PRODUCT OPERATION.

US (FCC)

**FCC ID: 2AD65MRBT MODEL NUMBER: MRBT**

THIS EQUIPMENT COMPLIES WITH FCC RADIATION EXPOSURE LIMITS SET FORTH FOR PORTABLE USE CONDITIONS.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION. NO CHANGES SHALL BE MADE TO THE EQUIPMENT WITHOUT THE MANUFACTURER'S PERMISSION AS THIS MAY VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

CANADA (IC)

**IC: 12731A-MRBT MODEL NUMBER: MRBT**

THIS EQUIPMENT COMPLIES WITH THE SAFETY REQUIREMENTS FOR RF EXPOSURE IN ACCORDANCE WITH RSS-102 ISSUE 5 2015 FOR PORTABLE USE CONDITIONS.

THIS CLASS B DIGITAL APPARATUS COMPLIES WITH CANADIAN ICES-003. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION OF THE DEVICE.

EU (CE)  
THIS EQUIPMENT COMPLIES WITH THE APPLICABLE ARTICLES OF THE R&TTE DIRECTIVE 1999/5/EC AND ALL OTHER APPLICABLE EU DIRECTIVE REQUIREMENTS. PLEASE VISIT [WWW.MINIRIGS.CO.UK/COMPLIANCE](http://WWW.MINIRIGS.CO.UK/COMPLIANCE) FOR DECLARATION OF CONFORMITY AND FURTHER INFORMATION.

## OTHER INFORMATION

WARRANTY INFORMATION  
SUPPORT/CONTACT INFORMATION  
MANUFACTURER

[WWW.MINIRIGS.CO.UK/TERMS-AND-CONDITIONS](http://WWW.MINIRIGS.CO.UK/TERMS-AND-CONDITIONS)

[WWW.MINIRIGS.CO.UK/SUPPORT](http://WWW.MINIRIGS.CO.UK/SUPPORT)

MINIRIGS LTD, 10 BACKFIELDS LANE, BS28QW, UK



# INDEX

PRESS LINK TO SKIP TO PAGE

1. A WORD FROM US
2. UNPACKING
3. GETTING TO KNOW YOUR MINIRIG
4. TURN ON/OFF
5. CONNECT TO BLUETOOTH
6. CONNECT AUDIO CABLE
7. CHARGING
8. CHARGE YOUR DEVICES - POWER
9. WIRELESS STEREO PAIRING
10. POWER SAVING FEATURE
11. TROUBLE SHOOTING
12. WARRENTY AND REPAIRS

 
# A WORD FROM US

FIRST OF ALL WE WANT TO OFFER YOU A BIG THANK YOU FROM EVERYONE HERE AT MINIRIGS FOR PURCHASING A MINIRIG BLUETOOTH SPEAKER. WE HAVE SPENT YEARS DEVELOPING THIS PRODUCT, BUILDING ON THE SUCCESS OF OUR WIRED MINIRIG AND BRINGING IT UP-TO-DATE WITH THE LATEST BLUETOOTH FEATURES AND IMPROVEMENTS. WE HOPE IT BRINGS YOU MANY YEARS OF JOY.


## UNPACKING

BEFORE YOU BEGIN, OPEN UP THE BOX AND CHECK THE CONTENTS. YOU SHOULD HAVE:


1. MINIRIG SPEAKER

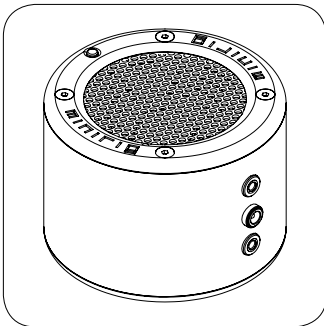


 
2. ZIP CASE FOR THE MINIRIG

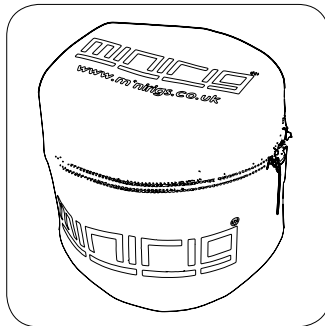

 3. AUX AUDIO CABLE 3.5MM

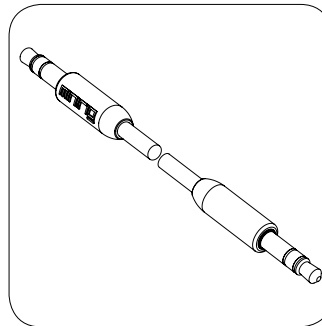

  4. BARREL TO USB POWER

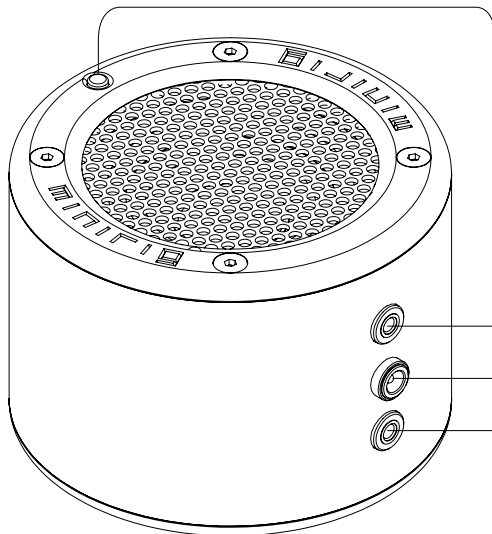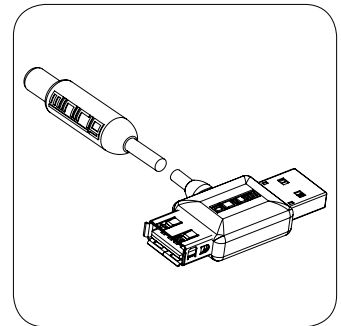

## GETTING TO KNOW YOUR MINIRIG

**BUTTON / STATUS LED** – LIGHTS UP TO SHOW STATUS. MULTIFUNCTION BUTTON TO OPERATE THE MINIRIG

**AUX SOCKET (HIGH GAIN)** – AUDIO INPUT FROM AUDIO PLAYER OR OUTPUT TO ANOTHER MINIRIG OR SUBWOOFER

**POWER SOCKET** – PLUG SUPPLIED, INSERT POWER CABLE IN HERE TO CHARGE THE MINIRIG OR TAKE POWER OUT

**AUX SOCKET (LOW GAIN)** – AUDIO INPUT FROM AUDIO PLAYER OR OUTPUT TO ANOTHER MINIRIG OR SUBWOOFER

# TURN ON/OFF

PRESS AND HOLD THE BUTTON FOR 2 SECONDS TO TURN THE MINIRIG **ON**, YOU WILL SEE THE LED TURN GREEN AND HEAR A TONE MOMENTARILY. FINALLY THE LED WILL SETTLE SHOWING YOUR BATTERY STATUS.

 
PRESS AND HOLD THE BUTTON FOR 2 SECONDS TO TURN THE MINIRIG **OFF**, YOU WILL SEE THE LED TURN RED AND HEAR A TONE MOMENTARILY.

FOR MORE INFORMATION REGARDING THE BATTERY STATUS SEE PAGE 5 OR  
PRESS HERE

## CONNECT TO BLUETOOTH


PLEASE REMOVE ANY AUDIO CABLES BEFORE TURNING YOUR MINIRIG ON.

TO CONNECT YOUR AUDIO DEVICE WITH THE MINIRIG, THEY HAVE TO BE "PAIRED"

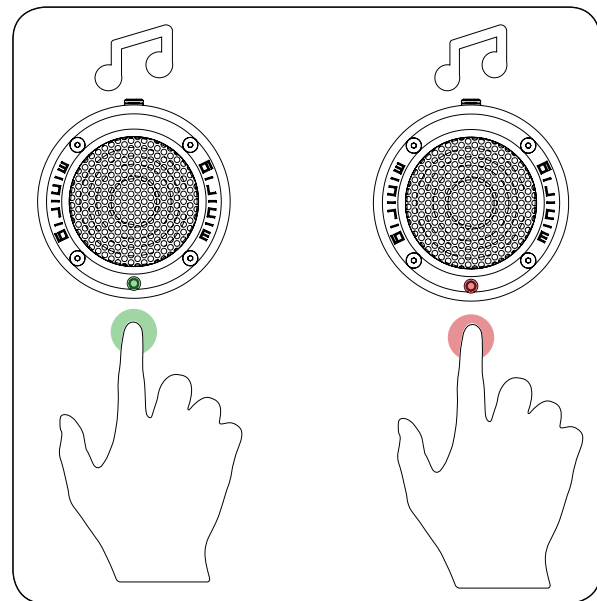


THE MINIRIG WILL ALWAYS BE AVAILABLE FOR PAIRING AS LONG AS IT IS ON, IN BLUETOOTH MODE, AND DOESN'T HAVE TWO DEVICES ALREADY CONNECTED TO IT. THERE IS NO PAIRING "MODE" UNLIKE OTHER BLUETOOTH SPEAKERS, WHICH MAKES PAIRING SIMPLER AND EASIER.

### TURN ON BLUETOOTH

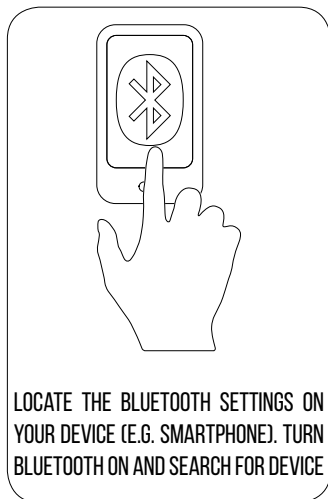 


LOCATE THE BLUETOOTH SETTINGS ON YOUR DEVICE (E.G. SMARTPHONE). TURN BLUETOOTH ON AND SEARCH FOR DEVICE

### FIND YOUR MINIRIG

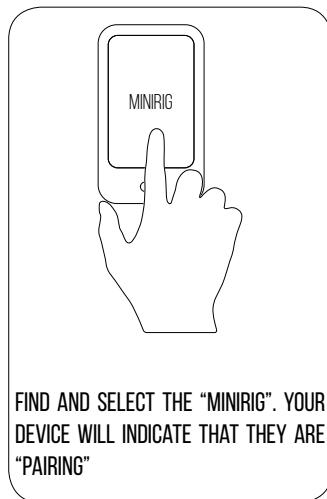 


FIND AND SELECT THE "MINIRIG". YOUR DEVICE WILL INDICATE THAT THEY ARE "PAIRING"

### PLAY SOME MUSIC

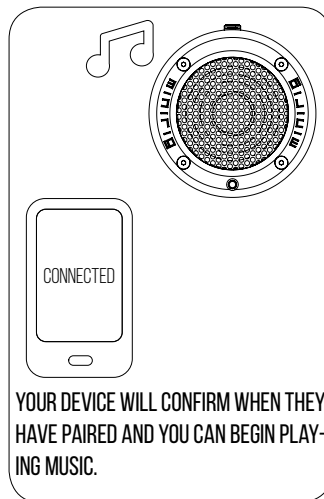 


YOUR DEVICE WILL CONFIRM WHEN THEY HAVE PAIRED AND YOU CAN BEGIN PLAYING MUSIC.

### SHARE WITH FRIENDS

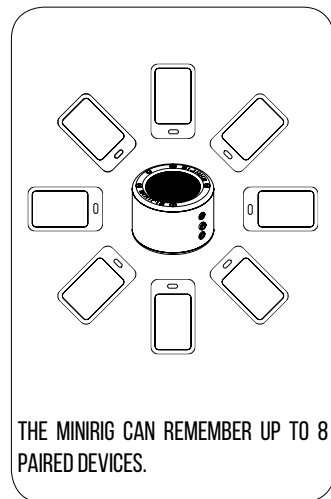 


THE MINIRIG CAN REMEMBER UP TO 8 PAIRED DEVICES.

## CONNECT TWO DEVICES TO SHARE MUSIC

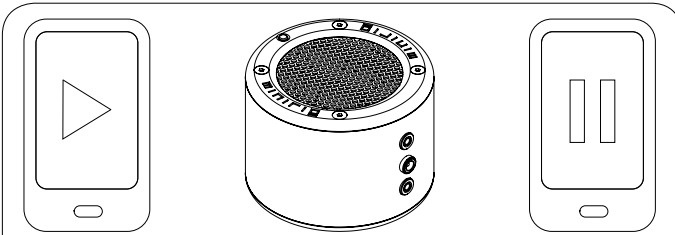 

YOU CAN PAIR AND CONNECT TWO DEVICES TO A MINIRIG AT THE SAME TIME. TO SWITCH BETWEEN THEM YOU NEED TO STOP THE MUSIC ON THE DEVICE PLAYING THEN START PLAYING MUSIC ON THE SECOND DEVICE.


## PLUG IN A SUBWOOFER WHEN USING BLUETOOTH

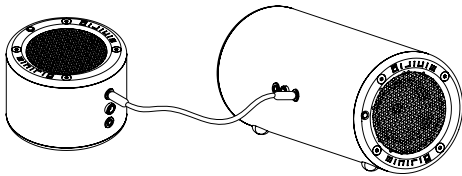 



IN BLUETOOTH MODE, THE MINIRIG WILL OUTPUT AUDIO FROM BOTH AUX SOCKETS. THIS ALLOWS YOU TO CONNECT TO ANOTHER MINIRIG, MINIRIG SUBWOOFER OR HI-FI SYSTEM.

# CONNECT AUDIO CABLE

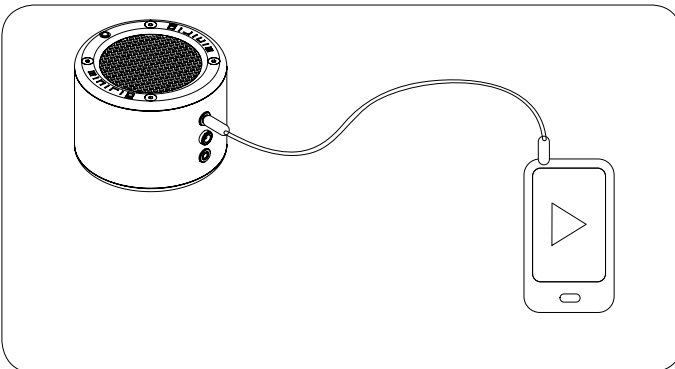 
IF YOUR DEVICE DOES NOT HAVE BLUETOOTH OR YOU WOULD LIKE TO USE A WIRED CONNECTION INSTEAD, YOU CAN CONNECT TO THE MINIRIG USING THE SUPPLIED AUX CABLE. ENSURE YOUR MINIRIG IS OFF AND REMOVE ANY AUDIO CABLES BEFORE USING CABLE MODE.



- PLUG ONE END OF THE AUX CABLE INTO THE HEADPHONE SOCKET ON YOUR AUDIO DEVICE.
- PLUG THE OTHER END INTO ONE OF THE AUX SOCKETS ON THE MINIRIG.

THE MINIRIG WILL TURN ON WHEN YOU INSERT THE CABLE DISPLAYING THE GREEN LED  THERE WILL BE NO TONE. WHEN YOU UNPLUG THE CABLE THE MINIRIG WILL TURN OFF DISPLAYING THE RED LED  THERE WILL BE NO TONE.

## HIGH AND LOW GAIN SETTINGS

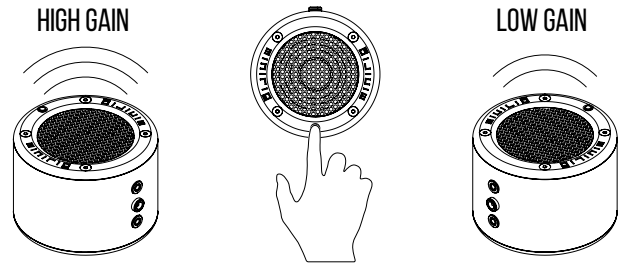 


THE MINIRIG HAS TWO GAIN (VOLUME) SETTINGS – LOW AND HIGH. IN BLUETOOTH MODE IT WILL ALWAYS START IN LOW GAIN. IN AUX MODE IT WILL START IN LOW OR HIGH GAIN DEPENDING ON WHICH AUX SOCKET YOU PLUG IN TO.

TO CHANGE GAIN AT ANY TIME:

- CHECK THAT THE MINIRIG IS ON AND AUDIO IS PLAYING
- PRESS THE BUTTON ONCE, DO NOT HOLD IT DOWN
- IN HIGH GAIN THE LED WILL BE BRIGHTER THAN IN LOW GAIN

WE RECOMMEND THAT YOU USE LOW GAIN AT NORMAL LISTENING LEVELS FOR THE BEST SOUND QUALITY

## HIGH AND LOW GAIN IN WHEN USING A CABLE

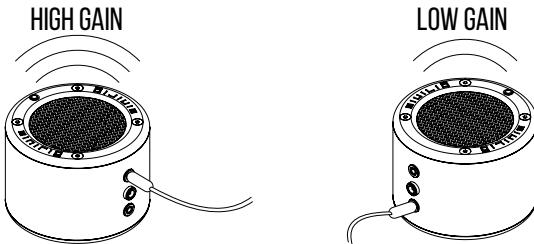 


THE TOP SOCKET WILL PUT THE MINIRIG IN HIGH GAIN, THE BOTTOM SOCKET LOW GAIN. PUSH IT IN FIRMLY TO MAKE THE CONNECTION. YOU CAN STILL CHANGE GAIN USING THE BUTTON AS IN BLUETOOTH MODE.

YOU CAN TURN THE MINIRIG OFF AND ON BY PRESSING AND HOLDING THE BUTTON. HOWEVER, IT WILL STAY IN AUX MODE UNTIL YOU REMOVE ALL THE AUDIO CABLES


IN AUX MODE, REMOVING THE AUDIO CABLES WILL ALSO TURN THE MINIRIG OFF. AGAIN THERE WILL BE NO TONE IN AUX MODE.

YOU MUST DO THIS BEFORE YOU CAN USE THE MINIRIG IN BLUETOOTH MODE.


## LINKING UP MINIRIGS

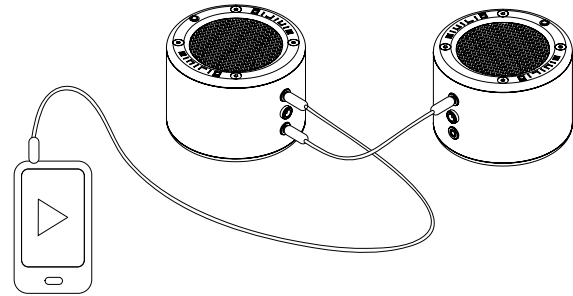 

 IN AUX MODE YOU CAN USE THE SPARE AUDIO SOCKET TO LINK OUT TO ANOTHER MINIRIG OR MINIRIG SUBWOOFER. IF USING A SUBWOOFER, PLEASE FEED THE AUDIO INTO THE BLUETOOTH MINIRIG FIRST AS SHOWN BELOW. ENSURE THAT YOU MATCH THE GAIN LEVELS.

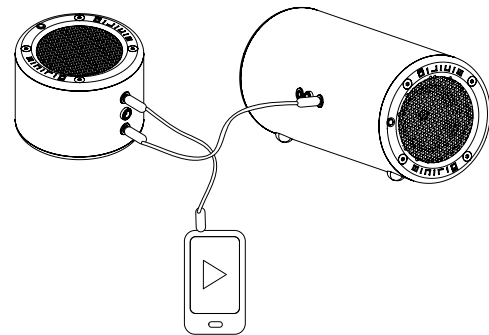

## LINKING-UP WITH SUBWOOFER AND MINIRIGS

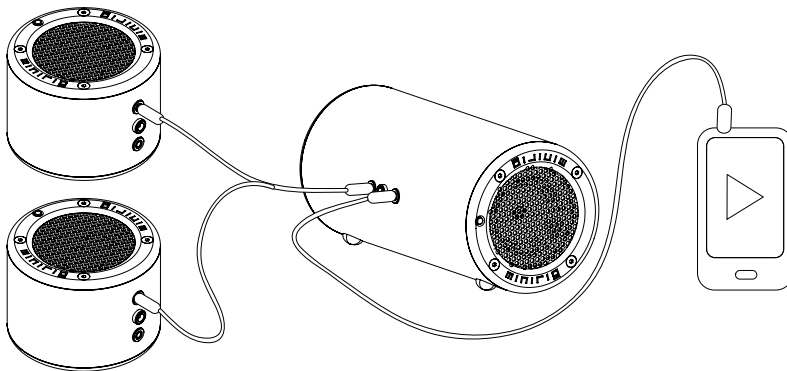 

IN AUX MODE YOU CAN USE THE MINIRIG SPLITTER CABLE TO GIVE YOU STEREO SOUND, SPLITTER CABLE CAN BE PURCHASED HERE [HTTP://MINIRIGS.CO.UK/SHOP/ACCESSORIES](http://minirigs.co.uk/shop/accessories).

WHEN USING A SUBWOOFER ENSURE YOU PLUG YOUR AUDIO DEVICE INTO THE SUB FIRST, THEN USE THE SPLITTER CABLE TO LINK OUT OF THE SUB TO THE MINIRIGS.



# CHARGING

WHEN THE MINIRIG IS ON, THE COLOUR OF THE LED WILL INDICATE THE BATTERY LEVEL.

GREEN: 75-100%

 
CYAN: 50-75%

BLUE: 25-50%


PURPLE: 5-25%

RED: 0%

WHEN THE MINIRIG IS OFF YOU CAN CHECK THE BATTERY STATUS BY PRESSING THE BUTTON ONCE (DO NOT PRESS AND AT ANY TIME YOU CAN CHARGE THE MINIRIG USING THE SUPPLIED POWER CABLE.

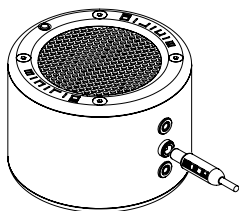

 PLUG THE ROUND END INTO THE MINIRIG POWER SOCKET. ENSURE YOU PUSH IT IN FIRMLY TO MAKE THE CONNECTION.

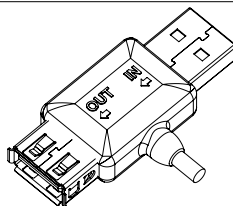

NEXT INSERT THE USB PLUG END MARKED "IN" INTO ANY POWERED USB SOCKET.


USB SOCKETS CAN BE FOUND ON MOST COMPUTERS AND MOBILE PHONE CHARGERS.

WHEN ON CHARGE, THE LED WILL FADE ON IN A REPEATING 2 SECOND CYCLE. THE COLOUR REPRESENTS THE BATTERY LEVEL.


A FULL CHARGE WILL TAKE AROUND 6 HOURS. ONCE THE BATTERY IS CHARGED, THE LED WILL STOP THIS REPEATING CYCLE.

## CHARGE YOUR DEVICES – POWER

 USING THE SUPPLIED POWER CABLE, YOU CAN TAKE POWER OUT OF THE MINIRIG TO CHARGE OR POWER ANY DEVICE WHICH USES 5V USB POWER. THE MINIRIG AUTOMATICALLY DETECTS WHEN A DEVICE IS TRYING TO DRAW POWER AND ACTIVATES THE POWER OUTPUT.

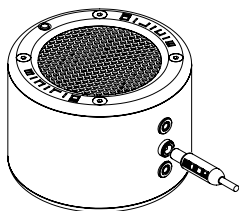

 PLUG THE ROUND END INTO THE MINIRIG POWER SOCKET. ENSURE YOU PUSH IT IN FIRMLY TO MAKE THE CONNECTION.

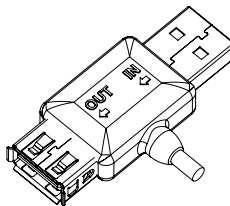

PLUG YOUR DEVICE'S USB CHARGING CABLE INTO THE MINIRIG POWER CABLE USB SOCKET – MARKED "OUT" PLUG YOUR USB CHARGING CABLE INTO YOUR DEVICE.


IF THE MINIRIG IS OFF, PRESS THE BUTTON ONCE TO ACTIVE THE POWER WITHOUT TURNING IT ON, AFTER A FEW SECONDS POWER WILL FLOW AND STABILISE

WHEN ON CHARGE, THE LED WILL FADE ON IN A REPEATING 2 SECOND CYCLE. THE COLOUR REPRESENTS THE BATTERY LEVEL.

A FULL CHARGE WILL TAKE AROUND 6-8 HOURS. ONCE THE BATTERY IS CHARGED, THE LED WILL STOP THIS REPEATING CYCLE.

# WIRELESS STEREO PAIRING

 
TWO MINIRIGS CAN LINK UP TOGETHER USING THE WIRELESS BLUETOOTH CONNECTION. THIS ALLOWS YOU TO CREATE AN IMMERSIVE STEREO SOUNDSTAGE OR TO DOUBLE UP THE SOUND IN DIFFERENT AREAS WITHOUT ANY CABLES.

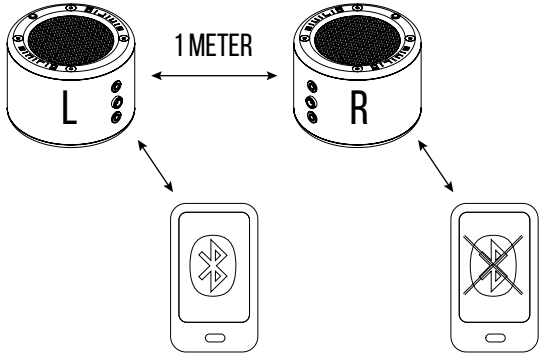


- TURN BOTH MINIRIGS ON IN BLUETOOTH MODE AND PLACE THEM AROUND 1 METER OR LESS APART – THEY ONLY NEED TO BE CLOSE FOR THIS PAIRING PROCESS.
- SELECT WHICH ONE YOU WANT TO USE AS THE LEFT (MASTER) SPEAKER. YOU MAY ALREADY BE CONNECTED AND PLAYING MUSIC THROUGH THIS MINIRIG.

IT IS VITAL THAT THE OTHER RIGHT (SLAVE) MINIRIG DOES NOT HAVE AN AUDIO DEVICE CONNECTED TO IT. IF IT DOES THEY WILL NOT PAIR.


## PRESSING THE BUTTON TO PAIR FOR TWS

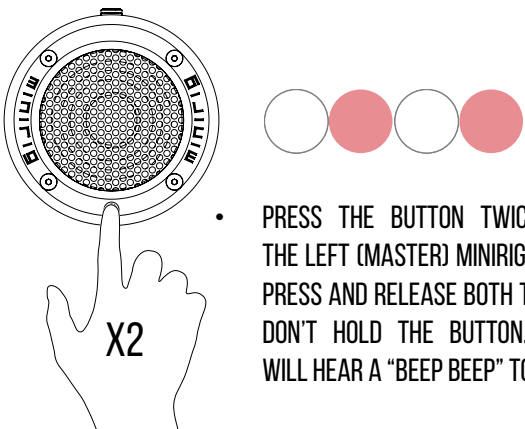 

- PRESS THE BUTTON TWICE ON THE LEFT (MASTER) MINIRIG. JUST PRESS AND RELEASE BOTH TIMES, DON'T HOLD THE BUTTON. YOU WILL HEAR A "BEEP BEEP" TONE.
- THE MINIRIG WILL DISCONNECT FROM YOUR AUDIO DEVICE AND START SEARCHING FOR OTHER MINIRIGS IN THE AREA. THE LED WILL FLASH WHITE AND RED.
- AT ANY TIME YOU CAN STOP THE PROCESS BY PRESSING THE BUTTON.
- WHEN IT HAS FOUND ANOTHER MINIRIG, THAT MINIRIG WILL ALSO START FLASHING WHITE AND RED

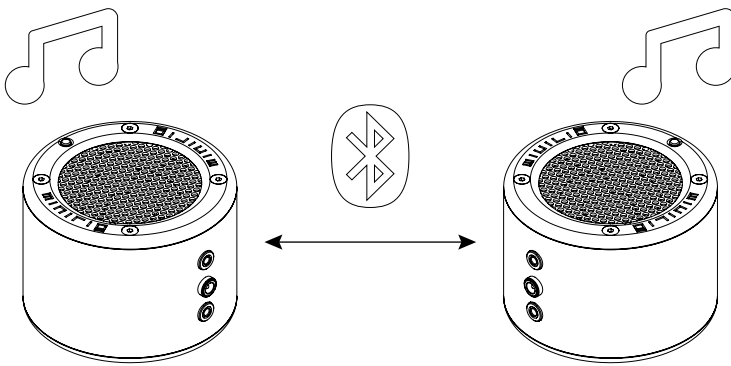 

- AFTER AROUND 10 SECONDS THEY SHOULD PAIR. YOU WILL HEAR A "CONFIRMATION" TONE FROM BOTH MINIRIGS AND THE LEDS WILL STOP FLASHING.
- IF THE PAIRING IS UNSUCCESSFUL OR IF THE SEARCH TIMES OUT, YOU WILL HEAR A DIFFERENT LOWER "FAILED" TONE. PLEASE TRY AGAIN OR SEE FAQ FOR ASSISTANCE.
- ONCE THE MINIRIGS ARE PAIRED, GO AHEAD AND CONNECT YOUR BLUETOOTH AUDIO DEVICE TO THE LEFT (MASTER) SPEAKER AS USUAL. IF YOU WERE PREVIOUSLY PAIRED AND CONNECTED, IT SHOULD AUTOMATICALLY RECONNECT. IN WIRELESS STEREO YOU CAN ONLY CONNECT ONE BLUETOOTH AUDIO DEVICE.

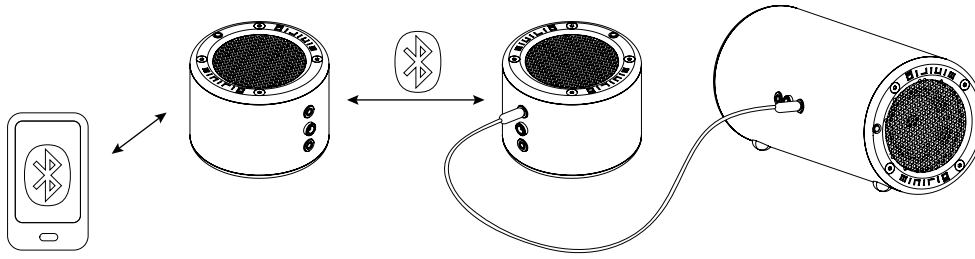 

- GO AHEAD AND CONNECT A MINIRIG SUBWOOFER TO EITHER MINIRIG IF YOU HAVE ONE. IT WILL RECEIVE BOTH LEFT AND RIGHT SIGNALS. THIS CAN BE RE-CONFIGURED USING THE MINIRIG APP. SEE DEMO VIDEOS FOR MORE INFORMATION.
- WHEN YOU TURN ONE OF THE PAIRED MINIRIGS OFF, THEY WILL BOTH TURN OFF. THEY WILL AUTOMATICALLY UN-PAIR AND RETURN BACK TO NORMAL.
- YOU CAN LOCK THEM TOGETHER USING THE MINIRIG APP, SO NEXT TIME YOU TURN THEM ON, THEY RECONNECT AUTOMATICALLY IN WIRELESS STEREO. SEE APP INSTRUCTIONS FOR MORE DETAILS.
- AT ANY TIME YOU CAN ALSO UN-PAIR THE MINIRIGS BY PRESSING THE BUTTON TWICE ON EITHER MINIRIG. YOU WILL HEAR A TONE TO CONFIRM THEY ARE UN-PAIRED.

## POWER SAVING FEATURES

TO SAVE POWER, THE AMPLIFIER CIRCUIT WILL AUTOMATICALLY TURN OFF WHILE THERE IS NO MUSIC PLAYING, EVEN THOUGH THE MINIRIG REMAINS ON. IN THIS "STANDBY" MODE, A FULL BATTERY CAN LAST UP TO 14 DAYS IN BLUETOOTH MODE OR 40 DAYS IN AUX MODE.

IF YOU ARE LISTENING TO THE MINIRIG AT LOW VOLUMES IN AUX MODE, PLEASE USE THE LOW GAIN SETTING TO ENSURE THE MINIRIG DOES NOT TURN OFF UNEXPECTEDLY.

IN BLUETOOTH MODE, THE MINIRIG WILL TURN OFF COMPLETELY IF THERE ARE NO DEVICES CONNECTED FOR 30 MINUTES.

 
## TROUBLESHOOTING

WE HOPE THAT YOU FIND THE MINIRIG EASY AND PROBLEM-FREE TO USE. HOWEVER, IF YOU ARE HAVING ANY TROUBLE HERE ARE A FEW THINGS YOU CAN TRY WHICH MAY HELP:

- PAUSE/STOP THE MUSIC FOR 5 SECONDS AND PRESS PLAY AGAIN. THIS CAN RESOLVE SOME AUDIO ISSUES.
- TURN THE MINIRIG(S) OFF AND ON AGAIN. THIS WILL RE-ESTABLISH THE BLUETOOTH CONNECTION.
- TRY A DIFFERENT AUX AUDIO CABLE OR MINIRIG POWER CABLE IF YOU HAVE ONE.
- MOVE THE MINIRIG CLOSER TO THE BLUETOOTH AUDIO DEVICE.
- TURN BLUETOOTH OFF AND ON AGAIN ON YOUR BLUETOOTH AUDIO DEVICE.

IF YOU ARE STILL HAVING TROUBLE, TRY A FULL RESET OF THE MINIRIG – THIS WILL RESTORE IT TO DEFAULT AND UN-PAIR ALL DEVICES.

- TO RESET YOUR MINIRIG, START WITH THE MINIRIG OFF AND NO CABLES PLUGGED IN.
- PRESS AND HOLD THE BUTTON. KEEP HOLDING IT FOR AT LEAST 16 SECONDS.
- EVENTUALLY THE MINIRIG WILL RESET AND THE LED WILL TURN OFF. YOU CAN RELEASE THE BUTTON NOW.
- WAIT FOR THE LED TO ILLUMINATE YELLOW. PRESS THE BUTTON ONCE.

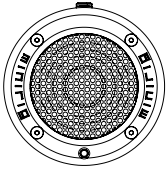

- AFTER AROUND 3 SECONDS THE MINIRIG AND LED WILL TURN OFF AND BE READY TO USE AGAIN AS NORMAL.
- YOU WILL HAVE TO RE-PAIR YOUR DEVICES AFTER A RESET.
- THE BLUETOOTH NAME WILL ALSO BE RESET TO DEFAULT - "MINIRIG"



IF YOU ARE STILL HAVING PROBLEM YOU CAN VISIT OUR SUPPORT PAGE. PLEASE READ OUR FAQ SECTION AND VIEW OUR DEMO VIDEOS BEFORE CONTACTING US.

## WARRANTY AND REPAIRS

---

WE HOPE THAT THE MINIRIG WILL NEVER LET YOU DOWN, HOWEVER IF YOU BELIEVE THAT THERE IS A FAULT WITH YOUR MINIRIG WE HAVE A SIMPLE AND FAIR WARRANTY AND REPAIR SERVICE.

IF YOU HAVE BEEN THROUGH OUR FAQ AND TROUBLESHOOTING SECTION AND STILL BELIEVE YOUR MINIRIG IS FAULTY, PLEASE CONTACT US THROUGH OUR SUPPORT PAGE.

WHERE POSSIBLE WE PREFER TO REPAIR ANY FAULTY PRODUCTS. OUR PRODUCTS ARE MADE IN THE UK, SO WE ARE IN THE UNIQUE POSITION OF BEING ABLE TO FIX AND REPAIR ANY OF OUR PRODUCTS QUICKLY OURSELVES. THIS ALSO BENEFITS THE ENVIRONMENT BY RE-USING AS MANY PARTS AS POSSIBLE, MINIMISING ANY HARMFUL OR NON-RECYCLABLE WASTE GOING TO LAND-FILL.

THE MINIRIG IS COVERED BY A FULL 1 YEAR WARRANTY SERVICE. PLEASE SEE OUR TERMS AND CONDITIONS FOR FULL DETAILS. IF YOUR MINIRIG PRODUCT IS FAULTY OUTSIDE OF THIS WARRANTY PERIOD PLEASE STILL CONTACT US AS USUAL. WE CAN STILL REPAIR YOUR PRODUCT QUICKLY AND EASILY THROUGH OUR FAIR NON-PROFIT REPAIR SERVICE.

## FOLLOW US BY HITTING THE LINK